




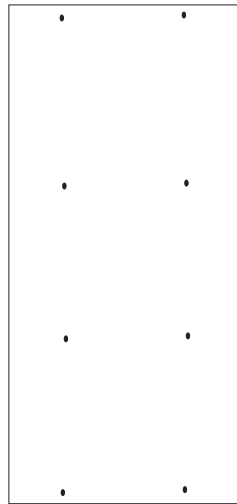
Assembly Instructions

ITEM
Triple Mobile Unit


STEP 1

Ensure that your parcel contains the following parts before proceeding with assembly:
(Please note these images show sides and backs for 1 70cm high unit - a 100cm unit will have longer sides and backs)


Item	Picture	Quantity
Castor		4
Cam Lock		28
Cam Bolt		28
15mm Screw		16
Shelf Peg		90 for a 70cm unit 144 for a 100cm unit




1 x Top

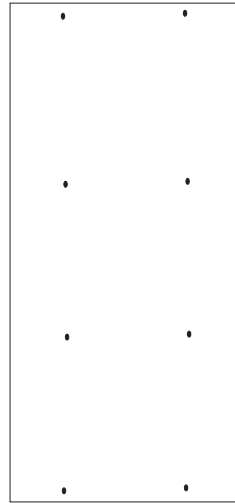


1 x Bottom
(has sixteen small holes on reverse)

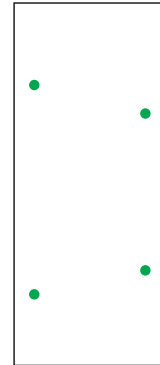


3 x Backs

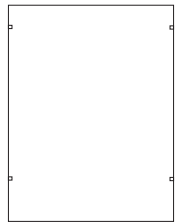


Shelves
15 for a 70cm unit
24 for a 100cm unit

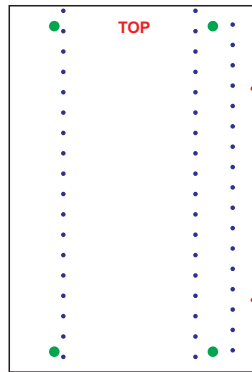

1 x Left Hand Side

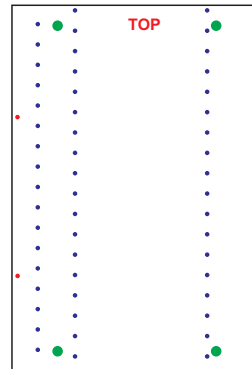


1 x Right Hand Side

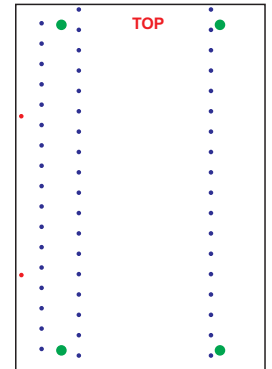


2 x Centre Dividers
(will have holes both sides)

STEP 2


Screw Cam Bolts into the following holes.
The thread should be fully screwed into the holes .

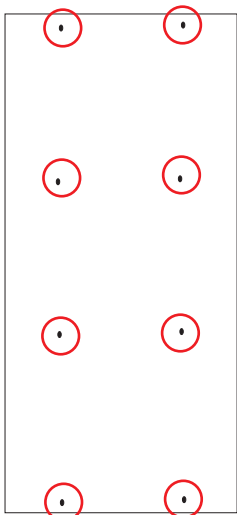


1 x Top

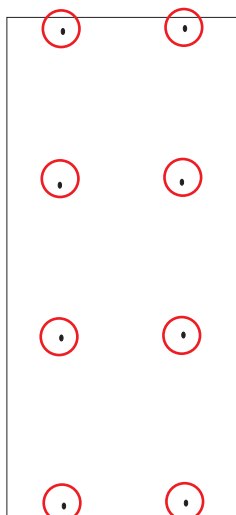


1 x Bottom
(has sixteen small holes on reverse)

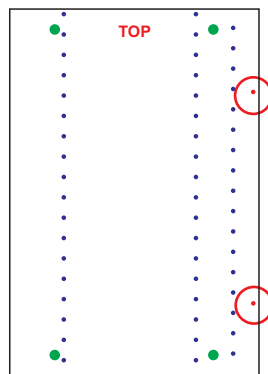

1 x Left Hand Side

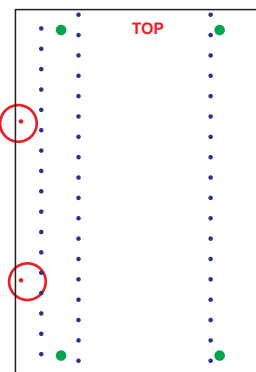


1 x Right Hand Side

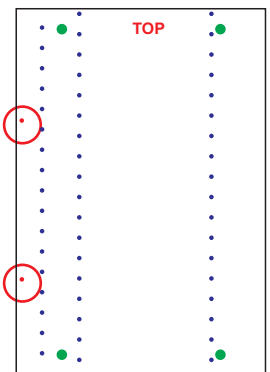

2 x Centre Dividers
(will have holes both sides)
Make sure to insert cam bolts into both sides of the panel

STEP 3

Insert Cam Locks into the following holes with the arrow pointing towards the edge.

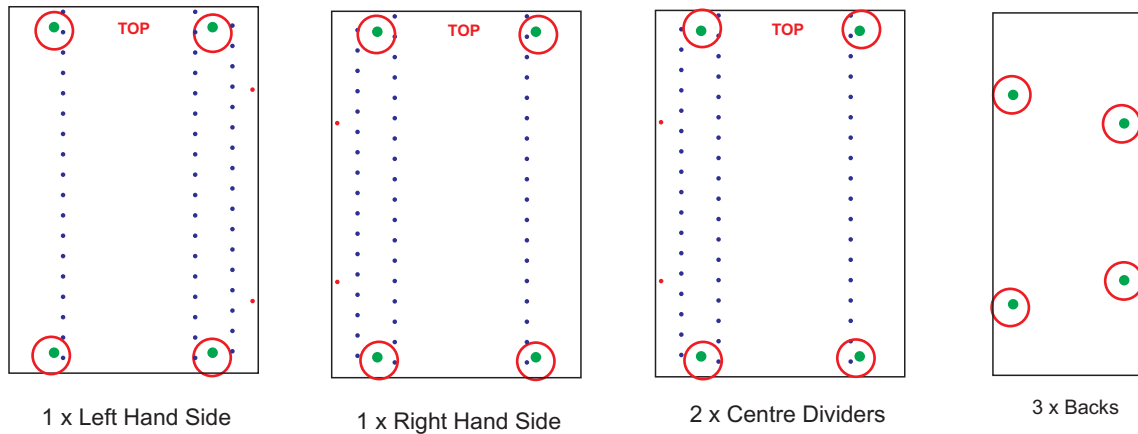

STEP 4

Fix the left hand side to one of the backs by inserting the cam bolts into the holes in the edges of the back and tightening the cam locks (turn the cam lock fully until it stops).

Then attach the first centre divider to this back and continue adding backs and dividers until you have got the right hand side attached.

STEP 5

Ensure you have the unit the right way up (the sides have a top and a bottom as illustrated above) and place the top onto the unit carefully inserting the cam bolts that are protruding from the top into the holes in the top edges of the sides and centre dividers.

Then tighten all eight cam locks in the sides and centre dividers.

STEP 6

Carefully turn the unit over so that it is now standing on its top. Then repeat step 5 to attach the base.

STEP 7

Attach the castors to the base using the screws provided. Then turn the unit over so that it stands on its castors.

STEP 8

Insert 6 shelf pegs per shelf - 4 to support the shelf and 2 above it at the back to lock it into place. Insert these pegs at spacings to suit your choice of boxes. Finally place the shelves onto the pegs so that it is locked into place.

**If you have any queries during assembly please call us free on
0800 048 8606**

www.storage4crafts.co.uk
Telephone: 0800 048 8606.
enquiries@storage4crafts.co.uk
Pathfields Business Park,
South Molton, Devon, EX36 3LL

